

10'x10' Instant Canopy Outer Leg PS1500302K and Inner Leg PS1500302L Replacement AIS

Replace the canopy outer leg and Inner Leg



1. Remove the hexagonal screw from the outer leg end cap and the slider by wrench.



2. Take out the broken outer leg.



3. Remove the block component with a screwdriver.



4. Take out the inner leg from the outer leg.



5. Press the slider button to remove the slider from the broken outer leg.



6. Press the slider button to install the slider on the new outer leg in the same direction as when it was removed.



7. Insert the new inner leg into the new outer leg. The direction of the inner leg hole should be the same as the outer leg hole, and the holes should be overlapped.



8. Install the block component.



9. Install the outer leg and the slider.