


Replace the crank housing Method B (In case the method A is failed, or the broken point of rope does not come out the upper pole)

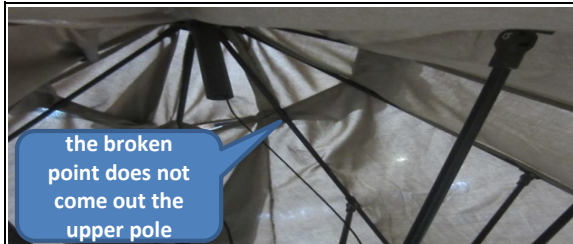


Steps


Remove canopy and dis-assemble frame



remove the screws from head hinge; take down the frame, and pull out the rope from upper pole

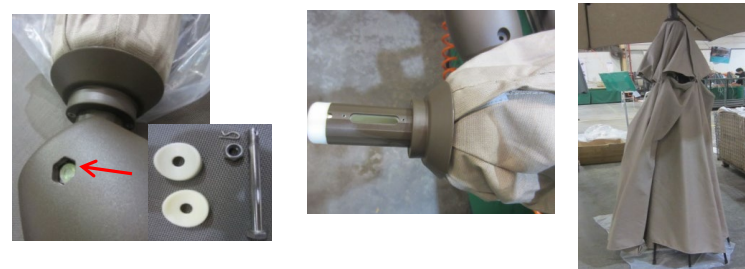

Dis-assemble the head hinge

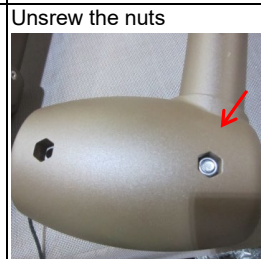

Dis-assemble the head hinge, do not move the parts inside the hinge



|  |  |   |   |   |  |
|--|--|---|---|---|--|
| <p>Replace the crank housing, assemble the head hinge</p>                  | <p>Take off the crank housing, and pull out the rope</p>  | <p>Prepare a new crank housing, thread the rope through the hole of inner tube</p>  | <p>Pull out the rope from the other end of tube, and twine on the pulley( pay attention to the direction)</p>        |   |  |
| <p>Assemble the head hinge</p>   |   | <p>Put back the crank housing.</p>    |   |   |  |
| <p>Thread the rope into the upper pole, pay attention to the direction</p> |    | <p>Pull down the rope from lower end of upper pole</p>                              | <p>Close the frame, assemble the fram with head hinge. All the accessories should be in their original position</p>  | <p>Pull out rope from lower hub. Fix back the place kick, and tie a knot at 5cm of the rope end.</p>  |  |
| <p>Assemble the frame to head hinge</p>                                    | <p>Fix the lower hub</p>                                | <p>Finished</p>    |   |   |  |